

Cutting Out Permateek Panels

You will require the following items at hand to lay your new Permateek decking.

1. A pencil
2. A sharp Stanley type craft knife
3. A sanding block with 40 or 60 grit paper
4. A metal straight edge or ruler
5. Weights and/or mashing tape

Preparation

Place the oversize rectangular Permateek panel on a flat cutting surface, place the pattern or template on top of the panel and weigh or tape down as necessary.

Method

1. Draw a pencil line carefully around pattern or template (fig 1)
2. Cut all straight edges using the Stanley knife with a standard blade (fig 2)
3. Cut out curves using the Stanley knife with a hooked blade (fig 3 & 4)
4. Sand around the edges with 40-60 grade abrasive paper on a block to give an even finish. (fig 5)
5. Lay in place on the boat to check for size (fig 6)
6. Glue down in place (see gluing instructions)

Fig.1



Fig.2



Fig.3

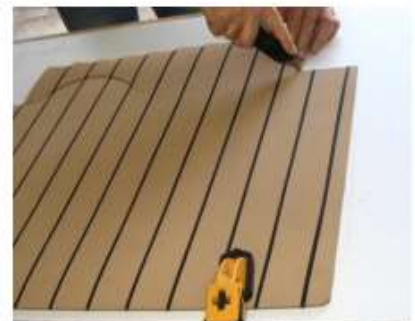


Fig.4



Fig.5



Fig.6

